


4. REMOVE STEERING WHEEL NO.3 COVER LOWER (See page RS-374)
5. REMOVE STEERING PAD (See page RS-375)
6. REMOVE STEERING WHEEL ASSEMBLY (See page SR-6)
7. REMOVE STEERING COLUMN COVER LOWER (See page SR-6)
8. REMOVE STEERING COLUMN COVER UPPER (See page SR-7)
9. REMOVE HEADLIGHT DIMMER SWITCH (See page LI-134)
10. REMOVE WIPER SWITCH (See page WW-17)
11. REMOVE INSTRUMENT CLUSTER FINISH PANEL SUB-ASSEMBLY CENTER

- (a) While lightly pushing down on the positions shown in the illustration with your fingers, insert the moulding remover and release the clips on the lower part of the instrument panel sub-assembly center.
HINT:
Tape the moulding remover tip before use.
- (b) Pull the instrument panel sub-assembly center toward the rear of the vehicle to release the clips on the upper part of the panel and remove the sub-assembly.

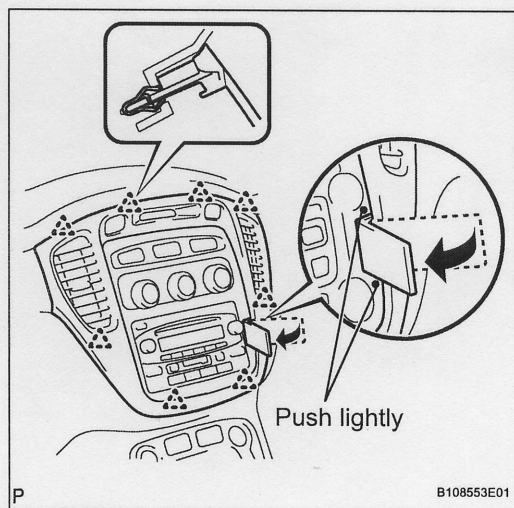

12. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY (w/o Navigation System) (See page AC-246)
13. REMOVE INTEGRATION CONTROL AND PANEL ASSEMBLY (w/ Navigation System) (See page AV-228)
14. REMOVE INSTRUMENT PANEL FINISH PANEL LOWER

- (a) Using a moulding remover, disengage the 5 clips.
- (b) Disconnect the connectors and remove the instrument panel finish panel lower.

